

Welcome back to the 80's and be ready to Get Blown Away . . . again.
Please read this user manual carefully before use and keep it for future reference.
Be sure to leave your number 2 pencil (for winding) at home. Thank you and please enjoy.

- What's Inside**
- (1) Rewind Bluetooth Speaker
 - (1) Carrying Case with Paper Jacket
 - (1) USB Charging Cable
 - (1) 3.5mm Audio Cable
 - (1) This Totally Tubular User Manual

SPECIFICATIONS

- Bluetooth version: V5.0 • Support profiles A2DP, AVRCP, HSP, HFP, GAVDP • Bluetooth Output Power Class 1.1W • Operation Range: up to 10m • Music Playback Time Approx: 13hrs# • Working Time Approx: 11hrs# (phone call) • Charging Time Approx: 2 hrs# • Working Voltage and Ampere: 3.7V-, 20mA • Battery Capacity: 250mAh • Power Input: 5V • Speaker Output: 0.5W
- Playing/Charging/Working Time will vary by different devices, volume and environments
- Operational range is up to 10 meters line-of-sight in an open and clear environment

AUDIO CHARACTERISTICS

Speaker	Driver Size	36mm
	Impedance	8Ω
	RF Sensitivity	-92dBm<0.1%BER
	Frequency Response	20Hz-20kHz
Microphone	Directivity	Omni Directional

LOCATION OF CONTROLS

1. Speaker 2. Micro USB Charging Port 3. Kickstand 4. Power ON/ Off Button 5. LED Indicator
6. AUX input 7. Microphone

- DIRECTIONS**
- **Step 1: Turning on the Speaker**
Press and hold the Power ON/OFF button for approx 4 seconds, on the side of the speaker. This will prompt the Flight of the Valkyries melody/intro. Shortly after, the LED Indicator will start blinking blue to begin Bluetooth Pairing Mode.
 - **Step 2: Pair and Connect**
Enable Bluetooth on your smartphone or other smart device. Choose Maxell CS1 from the pairing options on your smart device menu. You will hear a DING from the speaker when it is finished pairing with your device.
 - **Step 3: Get Blown Away!**
Start playing your music from your smart device. Now sit back, relax, and enjoy that high fidelity sound.

- **Step 4: Phone Calls**
When there is an incoming call, click the power on/off button once to pick up. To end the phone call, click the Power On/Off button once.
 - **Step 5: Turning Off The Speaker**
Press and hold the power on/off button on the side of the speaker for approx. 4 seconds.
 - **Using the AUX Input**
Use the 3.5mm audio cable (included) to connect into the AUX input on the side of your speaker. Then insert the other end of the audio cable into the AUX output on your audio device. Then begin to play music or other audio.
 - **Charging the Battery « CAUTION »**
 - Please charge the product completely before using the first time.
 - Please do not use the product during charging.
 - Please unplug the charger once fully charged.
 - Make sure the product is connected to a power source with USB DC 5V.
 - Please charge the battery on a fireproof surface and away from flammable items or liquids.
 - Charging should only be done by an adult or under adult supervision.
 - NEVER leave the charging unit unattended.
 - **How to Charge**
 - Turn off the product.
 - Connect the USB charging cable to the speaker.
 - Connect the other end of USB charging cable to a power source (USB DC 5V).
 - During charging, LED indicator will turn RED.
 - When the unit is fully charged, the LED indicator will switch off (to save battery).
- ATTENTION:** Please use the original charging cable included, to connect the speaker to your computer or compatible charging socket.

XL II-S 100 REWIND WIRELESS SPEAKER

USER MANUAL




Bluetooth® IT'S WORTH IT!

- WARNING:**
1. This product is not a toy; do not let the children use it without adult supervision.
 2. Do not put the product into fire, or expose to sources of high temperature, it might cause explosion.
 3. Do not burn or bury batteries.
 4. Do not puncture or crush.
 5. Do not use the product while driving or cycling and while operating any machinery.
Music playing during driving might be an offense of local laws in some regions. Users should check with local authorities, and decide the usage of the product under their own responsibilities.
 6. Do not use the product at a high volume for any long period of time. This may lead to hearing damage.
 7. To avoid hearing damage by sudden loud sound, please minimize the volume on the playback device before connecting the product to the playback device.
 8. Do not disassemble, modify or attempt to repair the product.
 9. To prevent fire or shock hazards, please disconnect the unit from charger when cleaning.
 10. In case of liquid leakage from the battery, do not touch with bare hands. If liquid gets into the eyes, do not rub, please flush with plenty of clean water immediately and consult a doctor; if liquid gets onto the body and clothes, please clean with plenty of clean water and consult a doctor if necessary.
 11. Please refer to the user guide and use the accessories provided.

- CAUTION:**
1. Lithium batteries must be recycled. Do not dispose in the bin.
 2. Only charge the unit with USB DC 5V.
 3. Charge batteries on a fireproof surface and away from flammable items or liquids.
 4. Battery should NEVER be left unattended while charging. Charging should only be done by an adult or under adult supervision.
 5. Follow the charging instructions in this manual and unplug the charger once the unit is fully charged.
 6. Please charge the product every 3 months if not used for a period of time. The battery might become un-rechargeable if it is fully discharged.
 7. This product is not waterproof, please do not put the product into water or let it get wet.
 8. Avoid operating the unit under direct sunlight or in hot, humid or dusty places.
 9. This product is designed for music playback and phone conversation only, please use it in a responsible way.
 10. The product performance may be affected by radio wave interference, please try to move away from nearby devices with wireless signal if there is any performance degradation.
 11. Do not let the unit fall onto floor or other hard surfaces, the internal circuit may get damaged.
 12. Please clean the unit with a soft dry cloth, DO NOT use chemical cleaning products.
 13. If you feel anything abnormal about the product during use, STOP using it immediately.

WARRANTY INFORMATION:

Maxell warrants this product to be free from all defects for a period of 1 year from the date of original purchase. This warranty does not apply to normal wear or damage due to accident, abnormal use, misuse or neglect. This warranty only applies to personal and individual use of the product and not for commercial, institutional or any other use. Any defective item will be replaced, at no charge, upon reasonable confirmation by Maxell of its defective condition, if returned with proof of purchase to an authorized Maxell dealer or directly to Maxell Warranty Replacement, 3 Garret Mountain Plaza, Suite 300, Woodland Park, New Jersey 07424. Neither Maxell nor any authorized Maxell dealer shall be liable for consequential damages arising from this Warranty, unless otherwise provided by law.

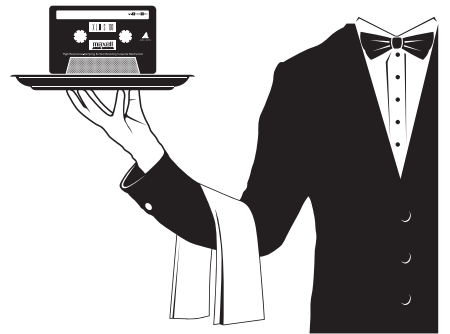

- FCC INFORMATION:**
- NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- CAUTION:** Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.