


Procedure for Repairing the Pipe & Wall Sealer

How to repair if the non-adhesive part is damaged.

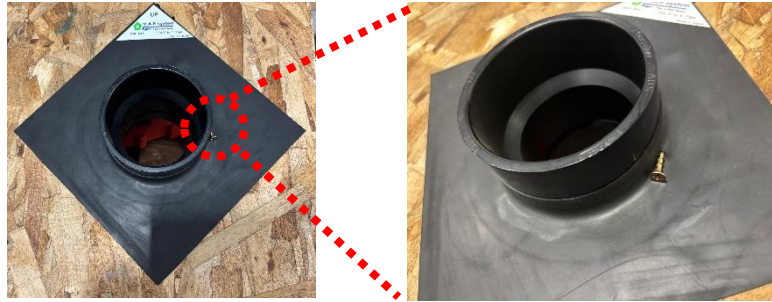


Step 1. Use a cutter or scissors to cut off only the non-adhesive part.



Step 2. Remove the cut-off part(non-adhesive part) from the piping.



Step 3. Apply the new pipe sealer so that it overlaps the old one.

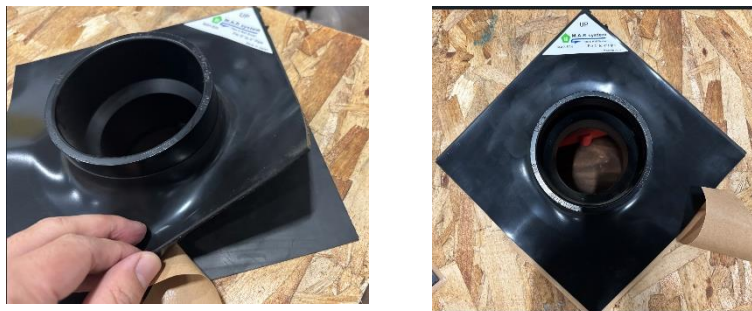

How to repair if the adhesive part is damaged.



Step 1. Cut a piece of new Pipe & Wall Sealer large enough to cover the damaged area.
※Other flashing tapes can also be used.



Step 2. Attach the cut piece to the damaged area.

